




2680 Commerce Road  
Rapid City SD 57702  
800-658-5457 \* 605-342-7644  
605-342-4036 Fax  
[www.warnechemical.com](http://www.warnechemical.com)

## Jackrabbit and Cottontail ATV Sprayers

### Installation Instructions

1. Using two (2) 16' one inch wide ratchet straps: Use one (1) strap on each side of unit wrapping each side on both back and arms twice with each strap.

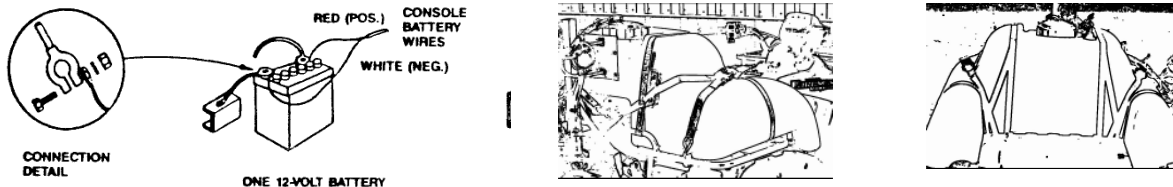

2. Route the power wire directly to the battery. Take care that the wire does not contact any hot, sharp, or moving surface. A 30 amp automotive type fuse on the hot wire is recommended for standard Jackrabbit sprayers.
3. Route red and black power wires directly to battery. Connect the red lead to the positive post and the black lead to the negative post. Do not connect power supply to cigarette lighter type plugs - doing so will shorten the life of the pump motor and void the warranty. For proper operation, pump requires 10 amps. If pump motor heats up, check amperage output of vehicle battery and charging system.

### Initial System Start-Up

1. Fill tank with water, run system, checking for possible leaks in plumbing. Also, to familiarize the operator with the ATV spray unit, using both the individual boomless nozzles and handgun.
2. Once operator is familiar with operation of unit, mix product to be applied according to label directions.
3. Reducing Spray Drift - To reduce fine droplets and spray drift, we recommend *Direct Drift Retardant*. Add half (1/2) to one (1) ounce per 24.5 gallon tank. Do not overdose. *Direct Drift Retardant* controls fine spray particles protecting operator from getting wet, increasing hours of spraying in light winds, and helps prevent drift to non-target plants.

### Winter Storage

1. When unit is to be stored during freezing temperatures, place antifreeze solution in tank and run through system until antifreeze is visible from handgun and boomless nozzles.

### Warnings

1. Do not mount on any vehicle where the loaded sprayer exceeds the vehicle's manufacturer load specifications.
2. Do not use on a vehicle against the vehicle manufacturer recommendations.
3. Do not spray rough or steep terrain that exceeds the safety capabilities of the vehicle.